



Industrial Spring Loaded PTO



Owner's Manual

Call Us For Parts 800.233.6539

Table of Contents

General Information	1
Clutch Operation	2
Engaging the Clutch	2
Disengaging the Clutch	3
Clutch Adjustment (HD1300)	3
Clutch Adjustment (HD1300XT)	4
Lubrication	4
Service Parts HD1300 PTO Assy. 1 3/4" & 2.25" Shaft	5
Exploded View HD1300 Lever Assy. and Linkage	6
Service Parts HD1300 Lever Assy. and Linkage	7
Service Parts HD1300 Clutch and Housing	8
Service Parts HD1300XT150 PTO Assy. 2 1/4" Shaft	9
Exploded View HD1300XT150 Lever Assy. and Linkage	10
Service Parts HD1300XT150 Lever Assy. and Linkage	11
Service Parts HD1300XT150 Clutch and Housing Assy.	12
Service Parts HD1300XT175 PTO Assy. 2 1/4" Shaft	13
Exploded View HD1300XT175 Lever Assy. and Linkage	14
Service Parts HD1300XT175 Lever Assy. and Linkage	15
Service Parts HD1300XT175 Clutch and Housing	16
Warranty Statement	17

General Information

The AUTO Mfg. Inc. clutch and PTO is a heavy-duty assembly capable of providing full engine horsepower from the PTO output shaft. Designed for use on both gasoline and diesel engines, the main components for each engine are the same.

Three models of the clutch and PTO are available:

HD1300 PTO

The **HD1300** provides a 1 $\frac{3}{4}$ " output shaft for use on gasoline and diesel engines. This assembly incorporates three heavy-duty ball bearings (one at the front and two at the rear of the housing), 1 $\frac{3}{8}$ " splined shaft, with hardened spline and bearing journals.

The 13" clutch disc with 1 $\frac{3}{8}$ " heat treated splined hub and ceramic metallic pads is designed for medium-duty industrial applications up to 120hp.

The industrial style pressure plate incorporates 12 springs providing a clamping force of 1825 lbs.

HD1300XT150

The **HD1300XT150** provides a 2 $\frac{1}{4}$ " output shaft with hardened spline and journals for use on diesel engines up to 150hp. The PTO assembly utilizes a 2 row heavy-duty ball bearing at the rear and a single row ball bearing at the front of the PTO housing.

The 13" clutch disc with 1 $\frac{1}{2}$ " heat treated splined hub and ceramic metallic pads is designed for heavy-duty industrial applications up to 150hp.

The industrial style pressure plate incorporates 12 springs providing a clamping force of 1825 lbs. An optional heavy duty pressure plate with 16 springs and 2425 lbs. of clamp load is also available.

HD1300XT175

The **HD1300XT175** provides a 2 $\frac{1}{4}$ " output shaft with hardened spline and journals and is recommended for use on diesel engines from 140hp to 180hp used in heavy duty industrial application. The PTO assembly utilizes a 2 row heavy-duty ball bearing at the rear and a single row ball bearing at the front of the PTO housing.

The 13" clutch disc with 1 $\frac{3}{4}$ " heat treated splined hub and ceramic metallic pads, and the heavy duty pressure plate providing 2425 lbs. of clamp load allows this PTO assembly to be used in heavy-duty applications up to 175hp.

PTO Shaft Pilot Bearing

The PTO output shaft in all models is centered into a pilot bearing located in the engine flywheel.

PTO and Clutch Assemblies

The PTO and clutch assemblies are designed for use on either in-line or belt driven applications. A drive shaft utilizing universal joints must be used with in-line installations to compensate for engine and driven unit misalignment.

Technical and Application Requests

For all of your questions, please contact Foley Engines at 1.800.233.6539 or 508.753.2979. We are here to help you with all of your AutoClutch needs!

Call Us For Parts 508.753.2979

Clutch Operation

WARNING

ROTATING SHAFTS, PULLEYS,
AND MOVING BELTS CAN CAUSE
SEVERE INJURY OR CAN BE FATAL.

THE ENGINE AND DRIVEN UNIT
MUST BE STOPPED BEFORE ANY
ADJUSTMENTS OR WORK IS
ATTEMPTED TO THE ENGINE, DRIVEN
UNIT, OR THE PTO CLUTCH ITSELF.

The **AUTO clutch** is disengaged with the handle in the 'down' or 'horizontal' position (Fig. 1). It is recommended that the engine be started with the clutch disengaged.

If the engine is being started for the first time during the workday, allow the engine to **WARM UP** for a few minutes before engaging the clutch.

Engaging the Clutch

For mechanical throttle actuated engines, increase the engine rpm to approximately 1000 to 1200 rpm. Engage the clutch by moving the clutch handle to the 'up' or 'vertical' position (Fig. 2) slowly enough to prevent stalling the engine.

For electronic throttle controlled engines, engage the clutch with the throttle control in the slow idle position. Use caution when engaging the clutch, not to allow excessive slippage of the disc prior to full engagement.

CAUTION:

Running the engine with the PTO dis-engaged for extended periods of time can cause failure of the throw-out bearing.

CAUTION:

Excessive slippage during engagement will cause premature failure of the clutch disc. This type of failure is not covered under the clutch warranty.

When the driven equipment is running at the same rpm as the engine allow the clutch to engage fully.



Fig. 1



Fig. 2

With the clutch handle in the vertical position and the clutch fully engaged, you can now move the engine throttle to the preferred engine operating position. The PTO output shaft is now rotating at engine rpm.

CAUTION:

Engaging and disengaging the clutch at maximum engine RPM can cause the disc, pressure plate and throw-out bearing to overheat and can result in premature failure of these components. This type of failure is not covered under the clutch warranty.

Call Us For Parts 800.233.6539

Disengaging the Clutch

Properly disengaging the clutch and PTO is as important as the engagement.

1. **DO NOT** disengage the clutch and PTO with the engine running at max rpm.
2. Reduce the engine throttle control slowly allowing the driven rotating components to slow down with the engine. When the engine speed nears 1000 rpm, move the handle of the clutch to the disengaged position.
3. **DO NOT** use the clutch as a 'brake' for the machine rotating components. This type of operation can and will cause fatigue and failure of all clutch components including the engine flywheel

CAUTION:

DO NOT use the clutch as a brake for stopping rotating components. This can cause fatigue and failure of all clutch components including the engine flywheel.

Clutch Adjustment

WARNING

ROTATING SHAFTS, PULLEYS, AND MOVING BELTS CAN CAUSE SEVERE INJURY OR CAN BE FATAL.

THE ENGINE AND DRIVEN UNIT MUST BE STOPPED BEFORE ANY ADJUSTMENTS OR WORK IS ATTEMPTED TO THE ENGINE, DRIVEN UNIT, OR THE PTO CLUTCH ITSELF.

A properly adjusted clutch will provide many hours of service life. Therefore it is important that the adjustment of the clutch linkage be checked after the first 15 hours of operation and every 250 hours thereafter.

An improperly adjusted clutch can result in premature wear to the clutch disc, pressure plate, throw-out bearing, and engine flywheel.


HD1300

1. With the clutch handle in the engaged position, adjust the nut against the 'rocker ball' until a 1/8" gap is obtained between the nut and the 'rocker ball'.
2. Use the 1/8" gauge tool (41500103) to slip between the nut and the rocker ball with a slight amount of pressure.
3. Tighten the lock nut to the adjusting nut.
4. Place the handle in the disengaged position (horizontal). Check to make sure that the PTO output shaft turns freely.

HD1300

DIESEL ENGINES

SK10732C

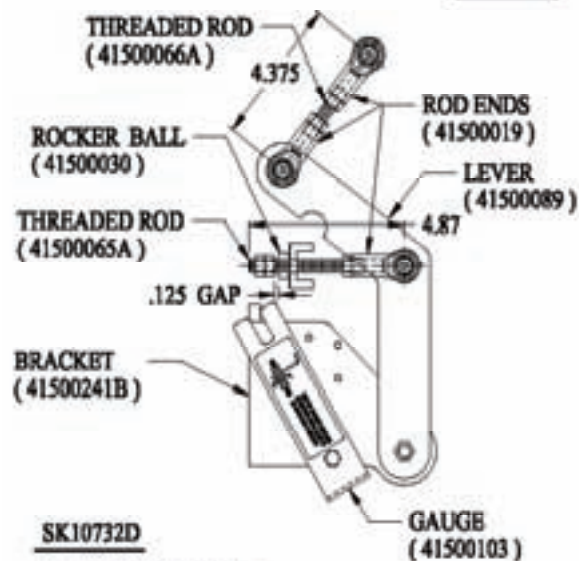


Call Us For Parts 800.233.6539

HD1300XT150 & XT175

1. With the clutch handle in the engaged position, adjust the nut against the 'rocker ball' until a 1/8" gap is obtained between the nut and the 'rocker ball'.
2. Use the 1/8" gauge tool (41500103) to slip between the nut and the rocker ball with a slight amount of pressure.
3. Tighten the lock nut to the adjusting nut.
4. Place the handle in the disengaged position (horizontal). Check to make sure that the PTO output shaft turns freely.

HD1300XT150 & XT175

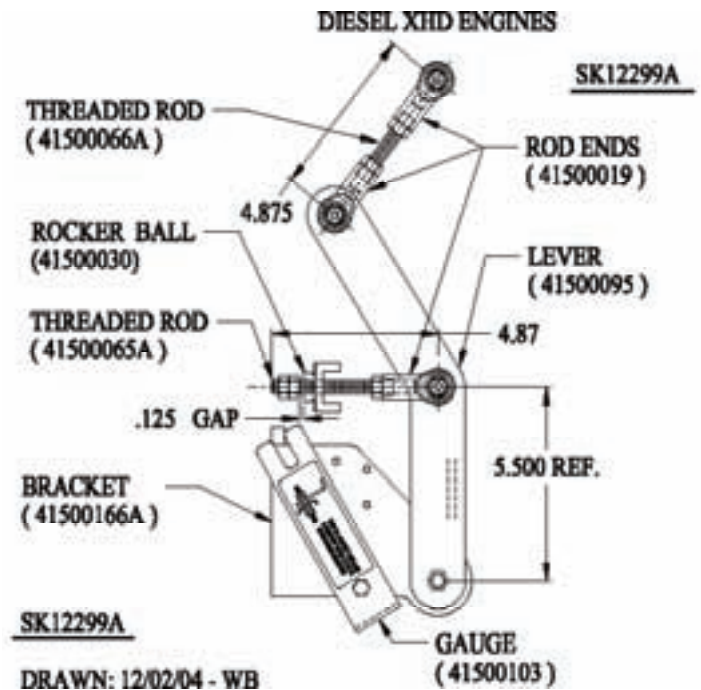

Lubrication


The PTO assembly on both the HD1300 and HD1300XT150 & XT175 are equipped with Sealed for life bearings. No greasing of the PTO assembly is required.

The clutch lever crossover shaft should be lubricated with a high temperature lithium base #2 lubricant at 250-hour intervals.

The bore of the throw-out bearing must be lubricated with a molybdenum based grease if disassembled for service reasons.

Call Us For Parts 508.753.2979

HD1300
1.375" Spline
1.75" Output Shaft & 2 .25" Output Shaft
PTO Assembly

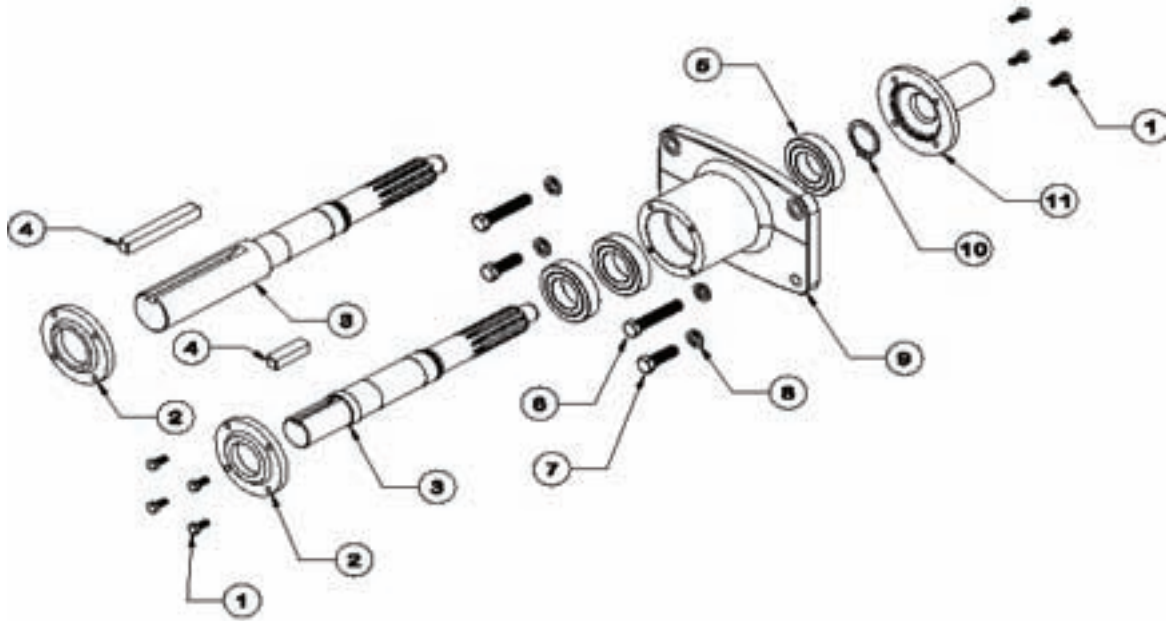


REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	45000030	8	Bolt, 5/16-18x1", Grade 5
2	41500057	1	Cover. Bearing Retainer, 1 3/4" Shaft
	41500123	1	Cover, Bearing Retainer, 2 1/4" Shaft
3	41500195	1	Shaft, PTO. 1 3/4" Shaft
	41500197	1	Shaft, PTO, 2 1/4" Shaft
4	41500190	1	Key, 1 3/4" Shaft, 3/8" sq. x 2 3/8" Long
	41500126	1	Key, 2 1/4" Shaft, 5/8" sq. x 5" Long
5	41500125	3	Bearing, PTO
6	45000105	2	Bolt, 9/16-12x3" Grade 5
7	45000177	2	Bolt, 9/16-12x1 3/4" Grade 5
8	45000103	4	Washer, Lock 9/16"
9	41500188	1	Housing, PTO
10	41500154	1	Ring, Snap 1 11/16"
11	41500198	1	Housing, Support Throw-out Bearing
	41500194	1	Assembly, 1 3/4" PTO Shaft & Housing
	41500196	1	Assembly, 2 1/4" PTO Shaft & Housing
			(Includes 1,2,3,4,5,8,10 & 11)

Call Us For Parts 800.233.6539

HD1300

Lever Assembly and Linkage

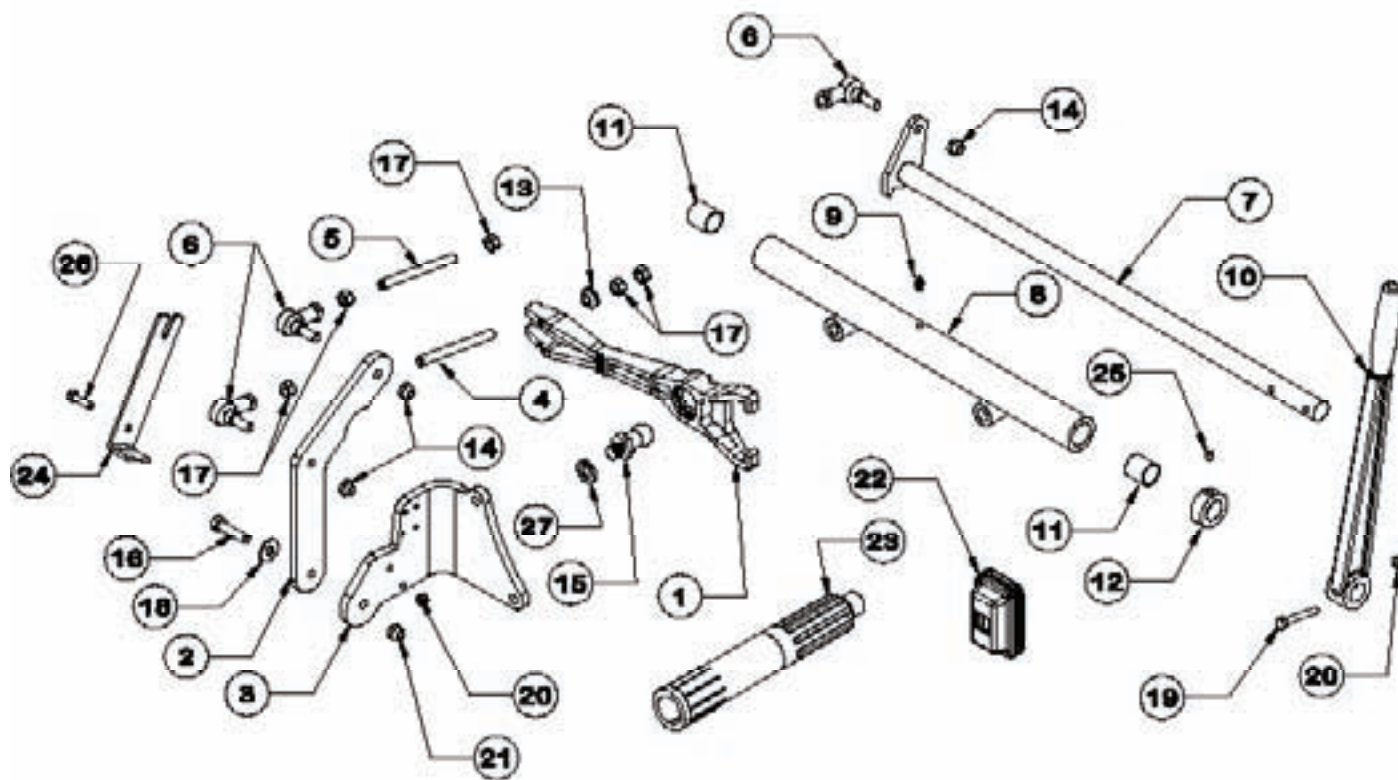

For Parts Breakdown See Next Page

Call Us For Parts 508.753.2979

HD1300


Lever Assembly and Linkage (con't)

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	41500063	1	Fork
Not Shown	41500174	1	Retainer, Clutch Fork
2	41500089	1	Linkage, Lever (Diesel Engine)
3	41500241	1	Bracket, Linkage (Diesel Engine)
4	41500067	1	Rod, Linkage (Diesel Engine)
5	41500066	1	Rod, Linkage (Diesel Engine)
6	41500019	3	Rod End
7	41500101	1	Shaft, Lever
8	41500111	1	Housing, Shaft (Diesel Engine)
9	41500043	1	Zerk, Grease
10	41500044	1	Handle
11	41500045	2	Bushing, Shaft
12	41500046	1	Collar
13	41500030	1	Ball, Rocker
14	45000004	3	Nut, Ny-lock 3/8-24
15	41500001	1	Ball, Pivot (Diesel Engine)
16	45000177	1	Bolt, 3/8-16x1" Grade 5
17	45000225	5	Nut, 3/8-24 Grade 5
18	45000048	1	Flat Washer, 3/8"
19	45000012	1	Bolt, 1/4-28x2" Grade 5
20	45000015	1	Lock Nut, 1/4-28
21	45000051	1	Lock Nut, 3/8-16
22	41500175	1	Boot
23	41500040	1	Tool, Spline Alignment
24	41500103	1	Tool, Adjustment
25	45000028	1	Setscrew - 5/16-18
26	45000014	1	Bolt, 1/4-28x1" Long

Call Us For Parts 800.233.6539

HD1300

Diesel Engine Clutch and Housing

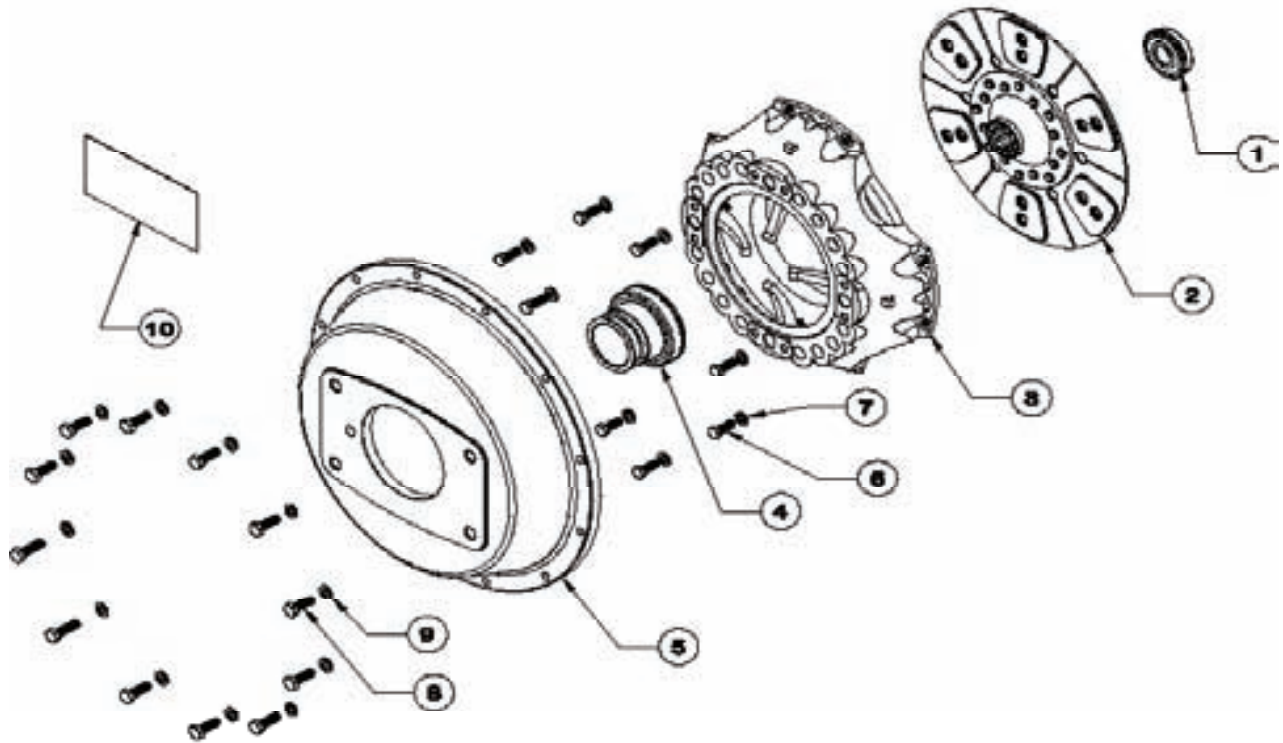

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	41500218	1	Pilot Bearing (Perkins, Cummins)
	41500217	1	Pilot Bearing (John Deere)
2	41500234	1	Disc, Clutch (Replaces 48900003)
3	41500060	1	Plate, Clutch Pressure (12 Springs)
4	41500003	1	Bearing, Throw Out
5	41500172	1	Housing, Adapter
6	45000224	8	Bolt, 3/8"-24x1" Grade 5 (Perkins, CAT)
	45000054	8	Bolt, 3/8"-16x1" Grade 5 (John Deere, Cummins)
7	45000063	8	Lock Washer, 3/8"
8	45000043	10	Bolt, M10-1.5x30mm
	45000226	2	Bolt, M10-1.5x35mm (Perkins, CAT, John Deere)
9	45000046	12	Lock Washer, M10
10	41500009	1	Decal, Diesel Clutch


Call Us For Parts 508.753.2979

HD1300XT150

1.50" Spline

2.25" Output Shaft

PTO Assembly

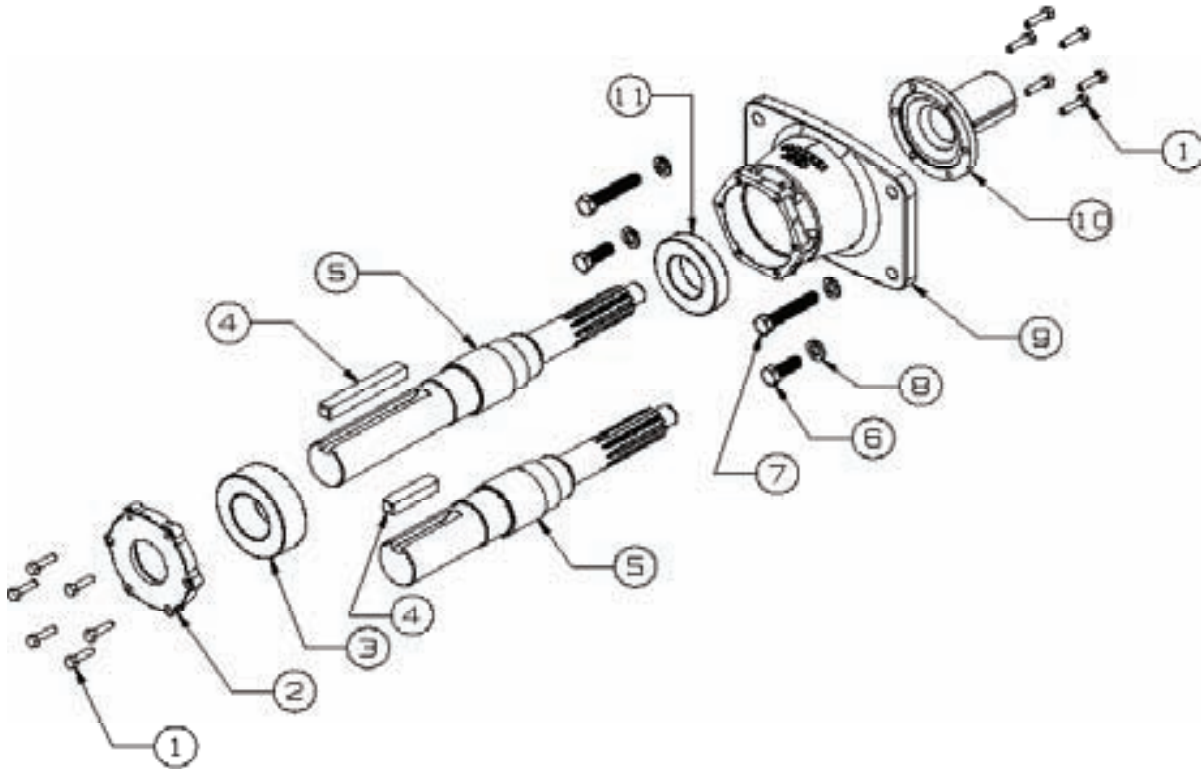


REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	45000212	12	Bolt, 5/16-18x1.25", Grade 5
2	41500205	1	Cover, Rear
3	41500206	1	Bearing, Rear
4	41500126	1	Key, .625 sq. x 5" Long
		1	Key, .625 sq. x 2.25" Long
5	41500203	1	Shaft, Long (6.56" Tail Shaft)
	41500224	1	Shaft, Short (4.04" Tail Shaft)
6	45000105	2	Bolt, 9/16-12x1 3/4", Grade 5
7	45000177	2	Bolt, 9/16-12x3", Grade 5
8	45000103	4	Lock Washer, 9/16"
9	41500204	1	Housing, PTO
10	41500242	1	Housing, Bearing Retainer
11	41500207	1	Bearing, Front
	41500252	1	Assembly, PTO Shaft & Housing (Long)
	41500253	1	Assembly, PTO Shaft & Housing (Short)

Call Us For Parts 800.233.6539

HD1300XT150

Lever Assembly and Linkage

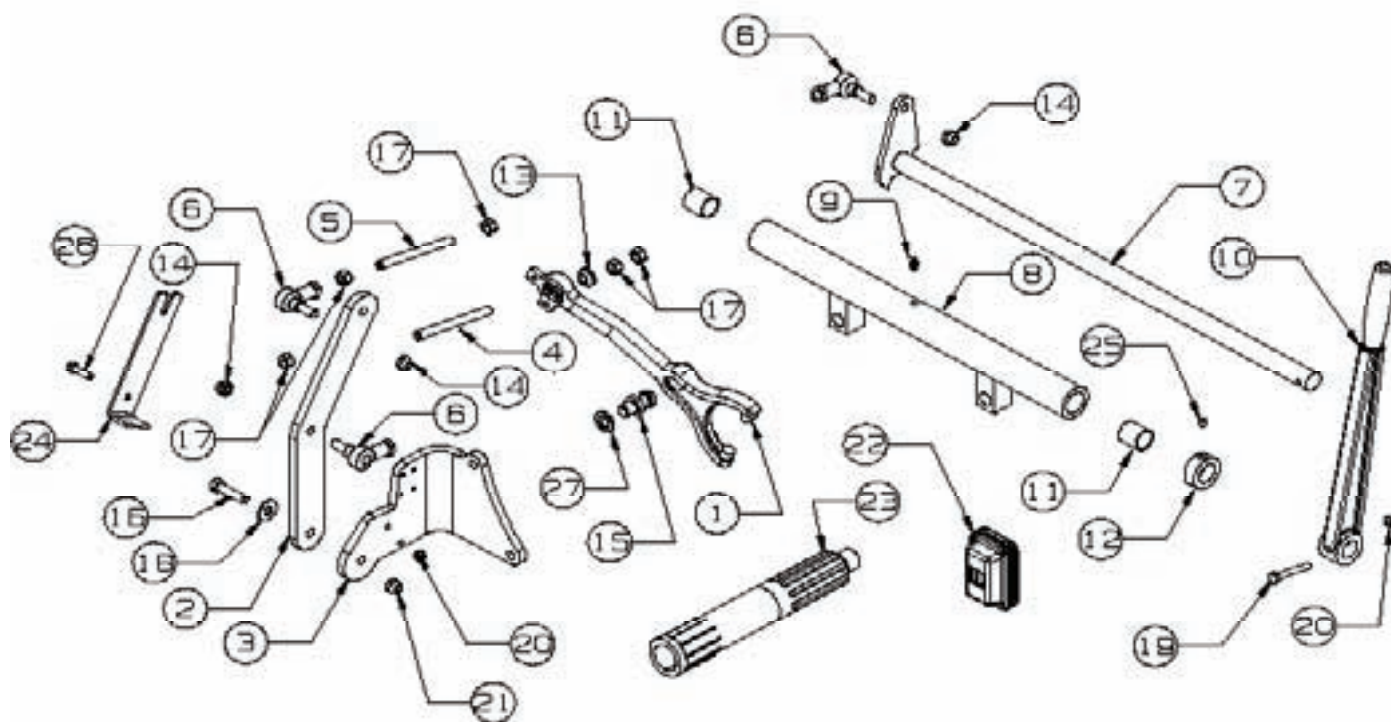

For Parts Breakdown See Next Page

Call Us For Parts 508.753.2979

HD1300XT150


Lever Assembly and Linkage (con't)

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	41500251	1	Fork
2	41500095	1	Linkage, Lever (Diesel)
3	41500241	1	Bracket, Linkage (Diesel)
4	41500065	1	Rod, Linkage (Diesel)
5	41500066	1	Rod, Linkage (Diesel)
6	41500019	3	Rod End
7,8,11,12	41500096	1	Shaft, Lever & Housing Assy.
9	41500043	1	Zerk, Grease
10	41500044	1	Handle
13	41500030	1	Ball, Rocker
14	45000004	3	Nut, Ny-lock 3/8-24
15	41500072	1	Ball, Pivot (Diesel)
16	45000177	1	Bolt, 3/8-16x1" Grade 5
17	45000225	5	Nut, 3/8-24 Grade 5
18	45000064	1	Flat Washer, 3/8"
19	45000012	1	Bolt, 1/4-28x2" Grade 5
20	45000015	1	Lock Nut, 1/4-28
21	45000051	1	Lock Nut, 3/8-16
22	41500175	1	Boot
23	41500164	1	Tool, Spline Alignment
24	41500103	1	Tool, Adjustment
25	45000028	1	Setscrew - 5/16-18
26	45000014	1	Bolt, 1/4-28x1" Long
27	45000103	1	Lockwasher - 9/16"

Call Us For Parts 800.233.6539

HD1300XT150

Diesel Engine Clutch and Housing

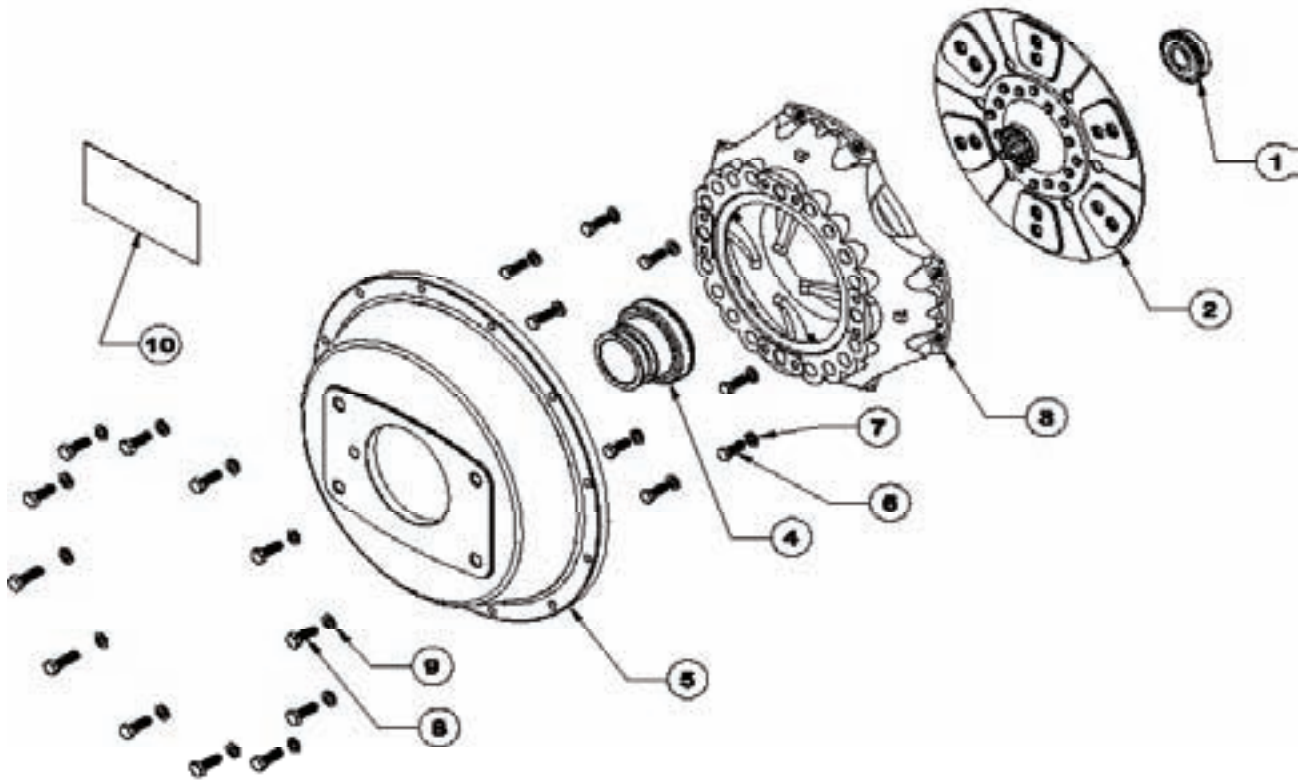


REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	41500218	1	Pilot Bearing (Perkins, CAT, Cummins)
	41500217	1	Pilot Bearing (John Deere)
2	41500237	1	Disc, Clutch
3	41500209	1	Plate, Clutch Pressure (16 Springs)
4	41500248	1	Bearing, Throw Out
5	41500172	1	Housing, Adapter
6	45000224	8	Bolt, 3/8"-24x1" Grade 5 (Perkins, CAT)
	45000054	8	Bolt, 3/8"-16x1" Grade 5 (John Deere, Cummins)
7	45000063	8	Lock Washer, 3/8"
8	45000043	10	Bolt, M10-1.5x30mm
	45000226	2	Bolt, M10-1.5x35mm (Perkins, CAT, John Deere)
9	45000046	12	Lock Washer, M10
10	41500216	1	Decal, Diesel Clutch

Call Us For Parts 508.753.2979

HD1300XT175

PTO Assembly, 1.75" Spline

2.25" Output Shaft

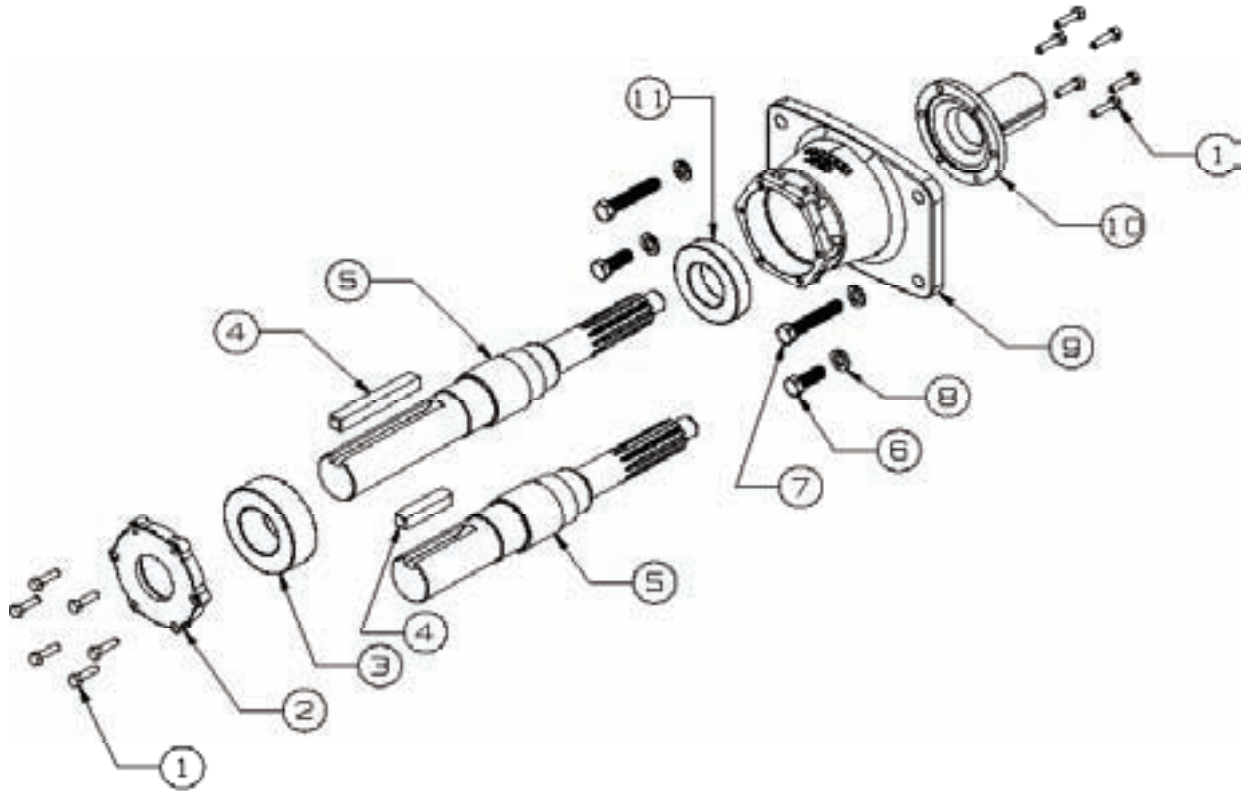


REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	45000212	12	Bolt, 5/16-18x1 1/4" Grade 5
2	41500205	1	Cover, Rear
3	41500206	1	Bearing, Rear
4	41500126	1	Key, .625 sq. x 5" Long
		1	Key, .625 sq. x 2.25" Long
5	41500246	1	Shaft, PTO Long, (6.56" Tail Shaft)
	41500245	1	Shaft, PTO Short, (4.04" Tail Shaft)
6	45000104	2	Bolt, 9/16-12x1 1/2"
7	45000177	2	Bolt, 9/16-12x3 1/2"
8	45000103	4	Washer, Lock 9/16"
9	41500204	1	Housing, PTO
10	41500242	1	Housing, Bearing Retainer
11	41500207	1	Bearing, Front
	41500243 (Long)	1	Assembly, PTO Shaft & Housing
	41500244 (Short)		(Includes 1,2,3,4,5,9,10, and 11)

Call Us For Parts 800.233.6539

HD1300XT175

Lever Assembly and Linkage

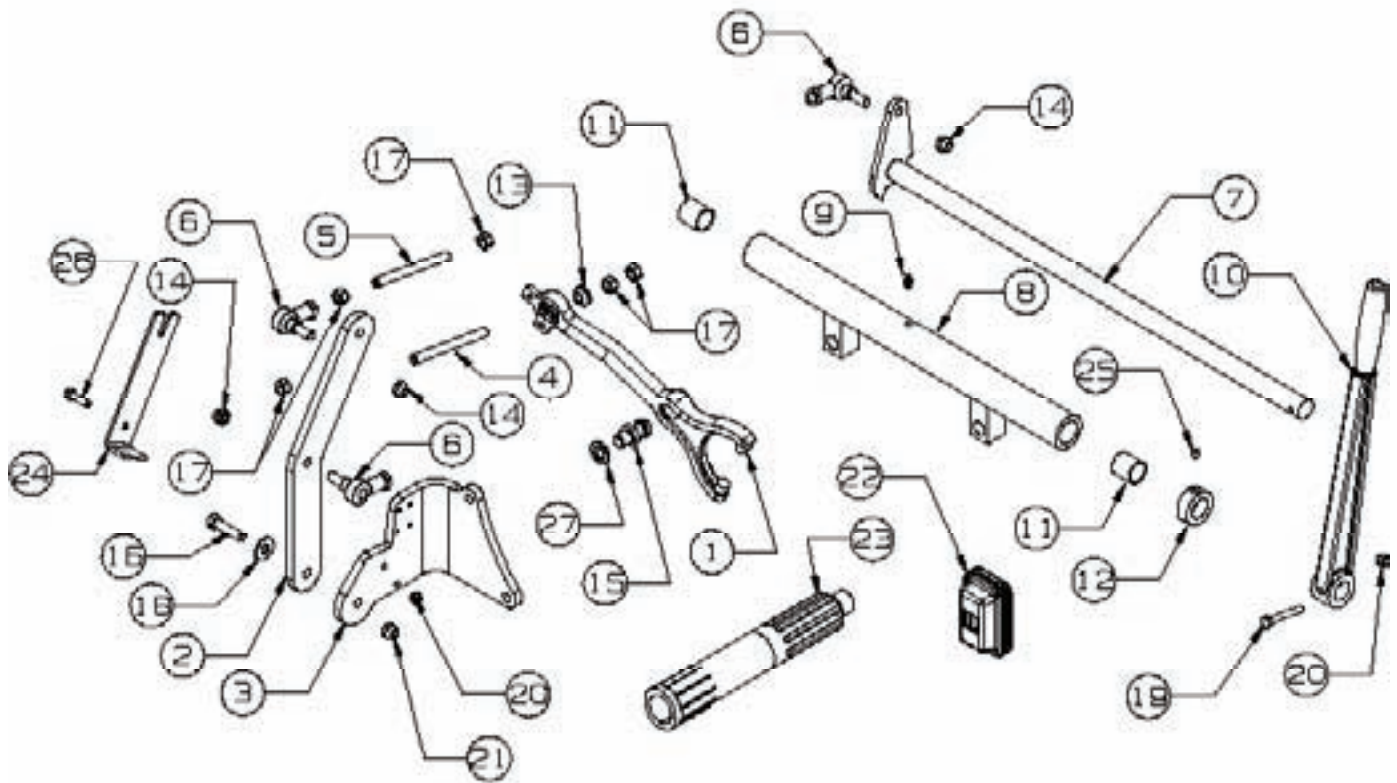

For Parts Breakdown See Next Page

Call Us For Parts 508.753.2979

HD1300T175


Lever Assembly and Linkage (con't)

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	41500251	1	Fork
2	41500095	1	Linkage, Lever (Diesel)
3	41500241	1	Bracket, Linkage (Diesel)
4	41500065	1	Rod, Linkage
5	41500066	1	Rod, Linkage (Diesel)
6	41500019	3	Rod End
7,8,11,12	41500096	1	Shaft, Lever & Housing, Assy.
9	41500043	1	Zerk, Grease
10	41500044	1	Handle
13	41500030	1	Ball, Rocker
14	45000004	3	Nut, Nylock 3/8-24
15	41500072	1	Ball, Pivot (Diesel)
16	45000177	1	Bolt, 3/8-16x1" Grade 5
17	45000225	5	Nut, 3/8-24 Grade 5
18	45000064	1	Flat Washer, 3/8"
19	45000012	1	Bolt, 1/4-28x2" Grade 5
20	45000015	1	Lock Nut, 1/4-28
21	45000051	1	Lock Nut, 3/8-16
22	41500175	1	Boot
23	41500247	1	Tool, Spline Alignment
24	41500103	1	Tool, Adjustment
25	45000028	1	Setscrew - 5/16-18
26	45000014	1	Bolt, 1/4-28x1" Long
27	45000103	1	Lockwasher - 9/16"

Call Us For Parts 800.233.6539

HD1300XT175

Diesel Engine Clutch and Housing

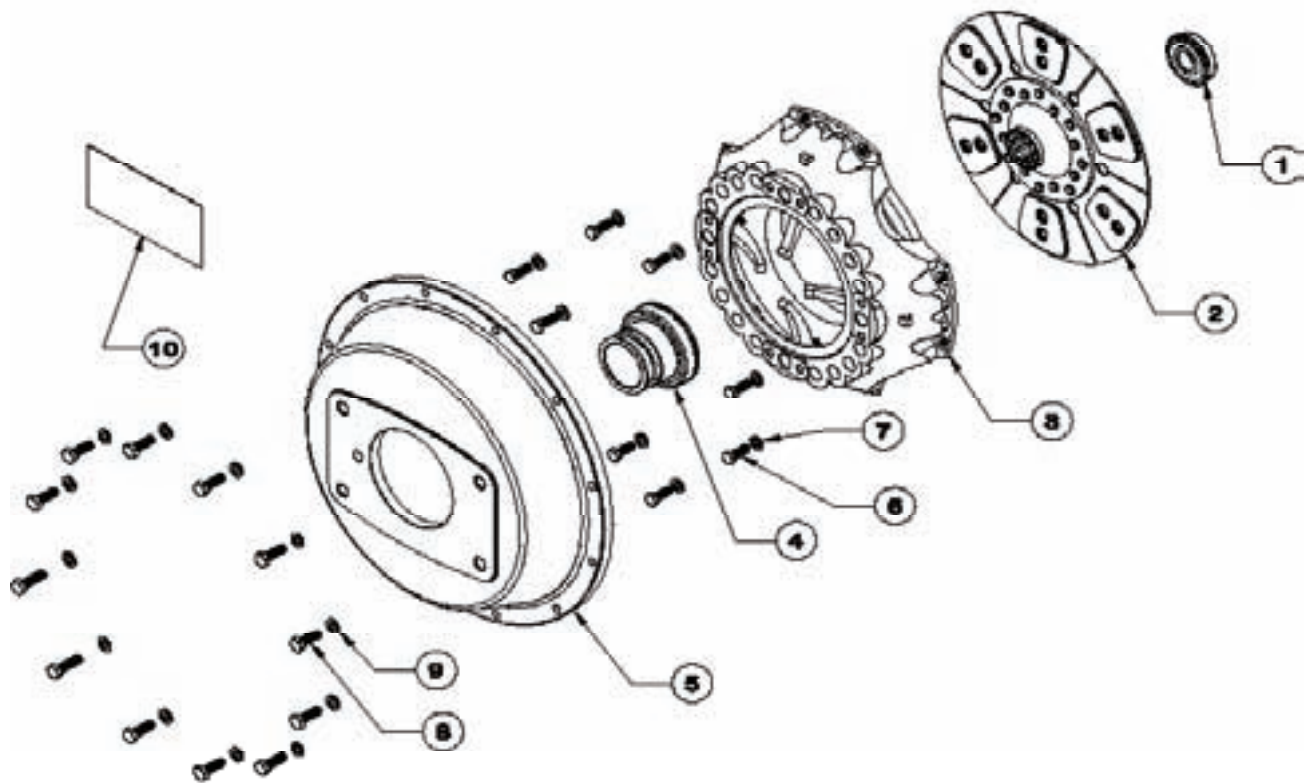

REF. NO.	PART NUMBER	QTY.	DESCRIPTION
1	41500218	1	Pilot Bearing (Perkins, CAT, Cummins)
	41500217	1	Pilot Bearing (John Deere)
2	41500239	1	Disc, Clutch
3	41500209	1	Plate, Clutch Pressure (16 springs)
4	41500248	1	Bearing, Throw Out
5	41500172	1	Housing, Adapter
6	45000224	8	Bolt, 3/8"-24x1" Grade 5 (Perkins, CAT)
	45000054	8	Bolt, 3/8"-16x1" Grade 5 (John Deere, Cummins)
7	45000063	8	Lock Washer, 3/8"
8	45000043	10	Bolt, M10-1.5x30mm
	45000226	2	Bolt, M10-1.5x35mm (Perkins)
9	45000046	12	Lock Washer, M10
10	41500216	1	Decal, Diesel Clutch

Call Us For Parts 508.753.2979



FOLEY ENGINES

1-800-233-6539